

**Model No: SLCASF-CVR**


- SLT12-31010-12T

**Material**

Detail	Specification	Quantity
Cover	Part F Cover	1
Screw	Self-Tapping Screw M3x6mm	2
	Manual	1

**Assembly Instructions For Cover Installation**

- Adjust the surfaces "A" and "B" of the cover to overlap the exterior surface of the power supply chassis (C and E).
- Slide the cover such that the mounting holes on the cover line up with the self-tapping holes on the chassis (be careful not to pinch the wires).
- Fasten with provided mounting hardware as shown in diagram below.

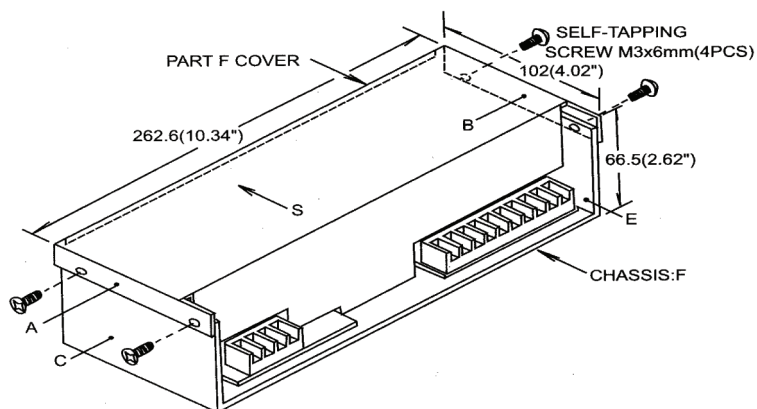


**Figure 1**

**Notes**

- Be very careful while assembling cover so that no parts on the PCB are damaged.
- When tightening the screws, make sure the torque is 8kg.
- Derate power supply by 15% with cover installed.

**Assembly Instructions for OVP**

- Locate the mounting hole as shown in Fig 2.
- Attach SLO-12-000-TB tightly against the inner side of cover.
- Position the right mounting holes and tighten the screw with 8kg torque.
- Assemble the two wires coming out of the SLO-12-000-TB, the white one goes to the "+" out and the black one goes to the "-" out on terminal block.

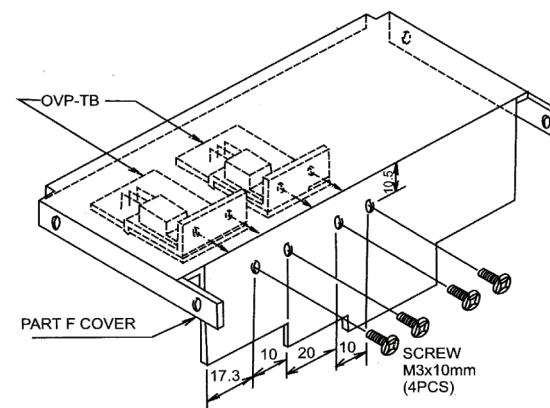

**Figure 2**