


Power Supplies Affected

SLS-24-120T

What's Included

- Part L Cover
- Four Self-tapping Screws M3x8 mm
- Instruction Manual

Assembly Instructions for Cover Installation

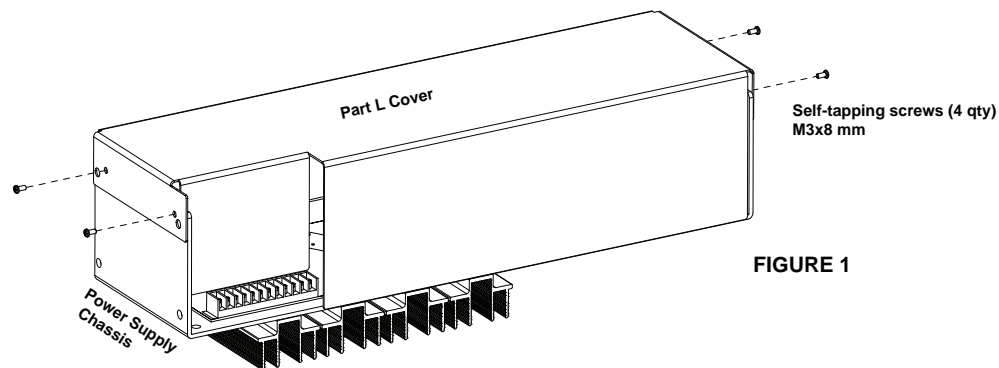

1. Position the Part L Cover so that it overlaps the exterior surface of the Power Supply Chassis.
2. Line up the Part L Cover mounting holes with the Power Supply Chassis mounting holes. Be careful not to pinch the wires.
3. Secure with the provided screws as shown in Figure 1.

Notes

1. Be careful while assembling the cover, so that no parts on the PCB are damaged.
2. When tightening the screws, make sure the torque is 8 kg.
3. Derate power supply by 15% with cover installed.

Technical Support

U.S.: (800) 377-4384

International: (847) 268-6651

E-mail: tech@solahd.com